



Connected is Everything

# 6350-SR/6355-SR

## LTE Router



## Welcome

Thank you for purchasing the Accelerated 6350-SR/6355-SR LTE Router.

### Before beginning your setup:

- ✓ Please familiarize yourself with the package contents (see reverse side).
- ✓ Review the applicable installation documents found at:  
[Accelerated.com/6350-SR/doc](http://Accelerated.com/6350-SR/doc)

### For more Product Documentation and Support information visit:

[Accelerated.com/6350-SR/support](http://Accelerated.com/6350-SR/support)

Please read the End User Agreement found at: [Accelerated.com/agreement](http://Accelerated.com/agreement); your use of this product is your acceptance of this agreement.



**CAUTION:** IF "LTE" LED IS FLASHING RED/YELLOW AND ALL OTHER LEDs ARE FLASHING GREEN DO NOT REMOVE POWER



Connected is Everything

## PACKAGE CONTENTS & QUICK START GUIDE FOR 6350-SR/6355-SR

If the contents are incomplete contact us at: [Support@Accelerated.com](mailto:Support@Accelerated.com)

- 1** 1002-CM & 6350-SR/6355-SR Units  
**Insert your activated SIM (2FF) card(s)<sup>1</sup>**, provided by your cellular carrier, into the 1002-CM, you should hear a click sound once each SIM is completely inserted. Next insert the 1002-CM modem into the 6350-SR by aligning the white clip. Press the modem in and then push the white clip in until it locks firmly in place.



- 2** Cell Antennas (2x)  
WiFi Antennas (2x -6350-SR only)  
**Attach all included antennas<sup>2</sup>.** Securely tighten the antenna using the barrel connector at the base of the antenna.



- 3** Power Supply Unit  
**Connect the power supply unit to the device.** Verify the signal strength indicator on the front of the 6350-SR/6355-SR shows two or more bars for proper operation.




- 4** Ethernet Cable




- 5** Interchangeable Power Plug Tips



- 6** Mounting Hardware:  
Screws (2x)  
Drywall Anchors (2x)

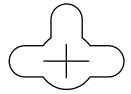

5" Wall Mounting Template

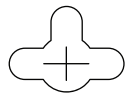

<sup>1</sup> Many issues can be solved by ensuring you are using an activated SIM from your carrier (for more information visit [Accelerated.com/activation](http://Accelerated.com/activation)).

<sup>2</sup> If using an external antenna it must be connected to the main antenna connector labeled 'MAIN'.