



# Inserting a LTE USB Modem into an Accelerated 6200-FX USB Cellular Router

October 21, 2013

# Removing 6200-FX Door Screw

---



Using a Philips screwdriver remove the 6200-FX door screw by turning it counterclockwise.

# Removing 6200-FX Door

---




After removing the 6200-FX door screw remove the door by sliding it to the right.

# Preparing the USB Cellular Modem

---



Position the AT&T Beam with USB connector stalk and AT&T Globe Logo facing upward.

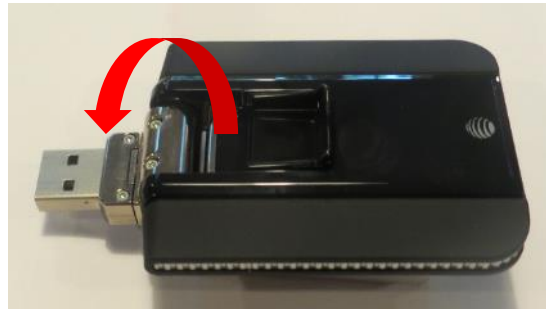


Fold USB connector to its open position



Twist USB connector counterclockwise (turn away from yourself) two clicks.

**Note: The same procedure can be applied to the AT&T Momentum and the Sprint 341. In the case of the AT&T Momentum the Sierra Wireless logo should face upward. In the case of the Sprint 341 the Sprint logo should face upward.**

# Inserting the USB Cellular Modem

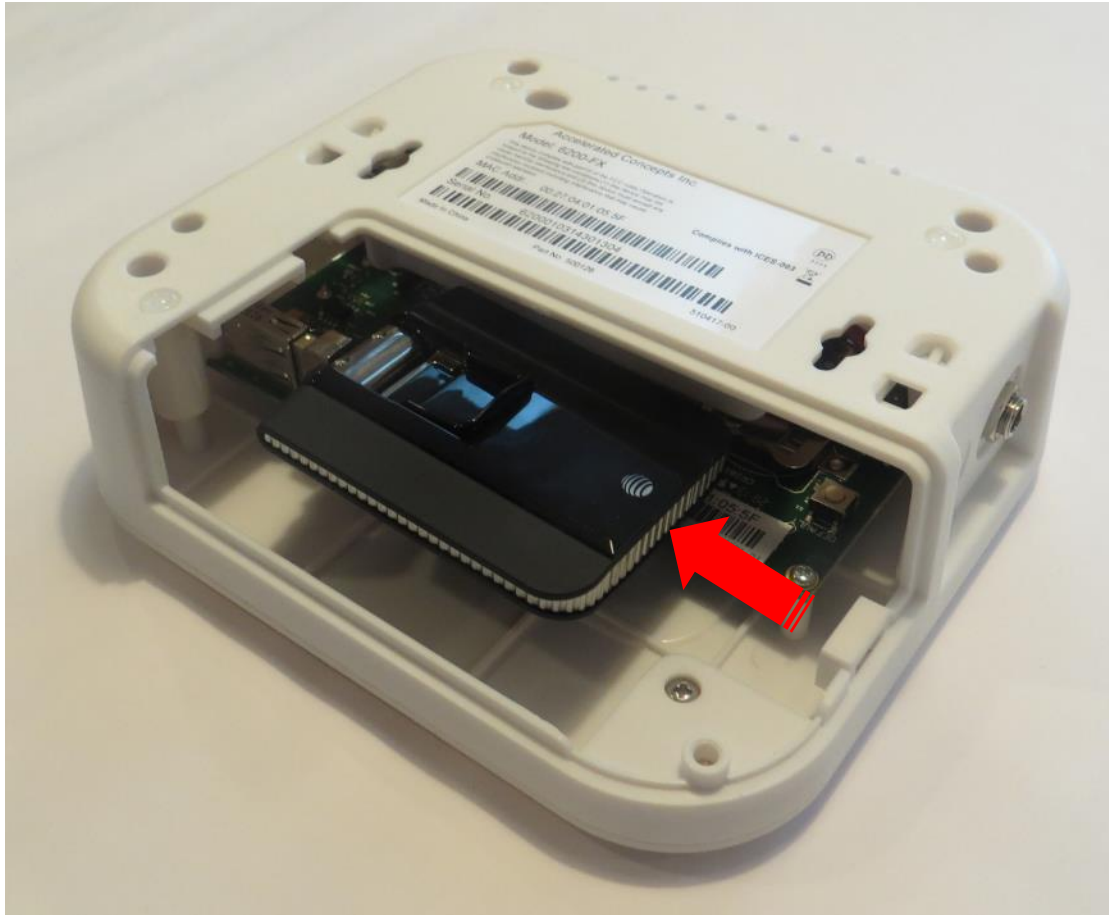

Slide the AT&T Beam into the 6200-FX's internal USB port and replace door and loosely tighten door screw.

**Important: When inserting an:**

- ✓ **AT&T Beam the AT&T Globe Logo needs to be facing upward**
- ✓ **AT&T Momentum the Sierra Wireless logo needs to face upward**
- ✓ **Sprint 341 the Sprint logo needs to face upward**